
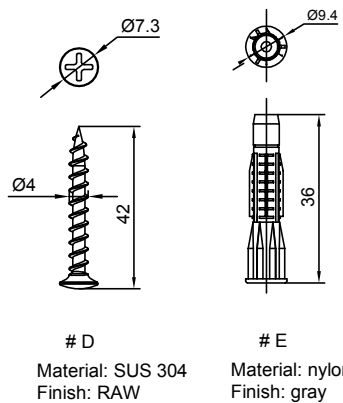


- Notes:
- 1.Remove all burrs and break all sharp edges.
 - 2.Meet the RoHS requirements;
 - 3.The scale of "*" is the key control size!
 - 4.Zinc head Minimum pull-off force:1000N;
 - 5.Safe load:200N.

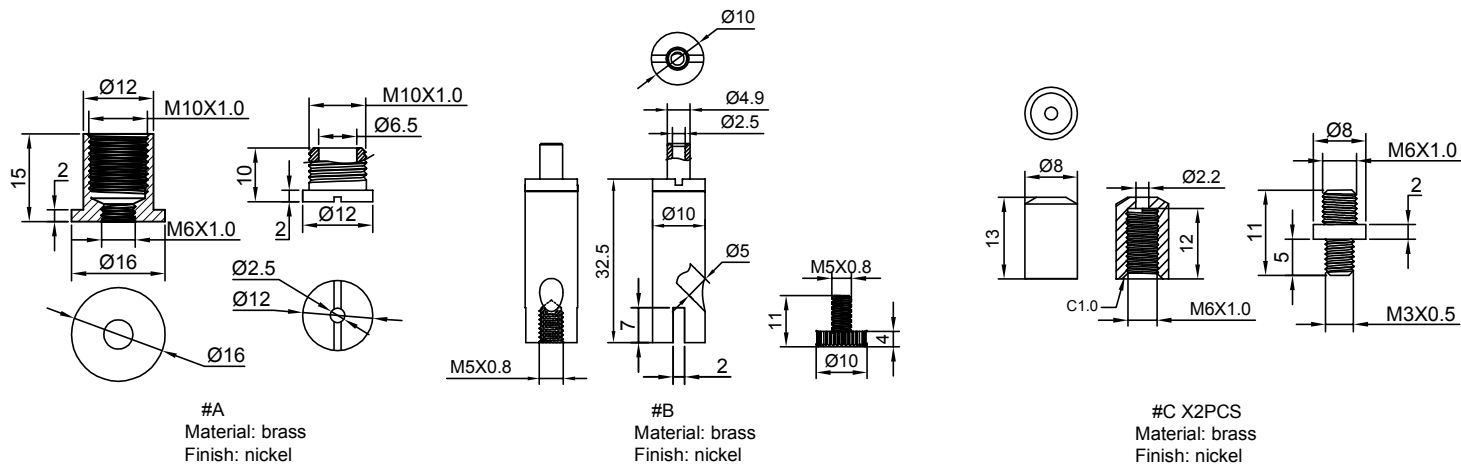